

How to Setup T.38 Fax

1. Open grandstream page
 - Hint. Can call *** then enter 02 to obtain IP address
2. Click on FXS Ports tab
 1. Update the following values to the following
 2. Primary SIP Server: sbc.simplelogin.net
 3. SIP User ID: Copy from Portal
 4. Authenticate ID: Copy from Portal
 5. Authenticate Password: Copy from Portal
 6. Name: Fax1
 7. Register expiration: 5
 8. Disable Call-waiting: NO
 9. Disable Call-waiting Caller ID: NO
10. Disable Call-waiting tone: NO
11. Preferred Vocoder (in listed order)
 1. PCMU
 2. G729
 3. G722
 4. Fax Mode: T.38
 5. Jitter Buffer Length: High
6. Click Update
7. Click Apply
8. Click Reboot
12. Go back to portal
13. turn on Caller ID Override & set to fax number.
14. Assign or purchase numbers

Revision #1

Created 2026-06-21 04:45:43 UTC by DC Tech Staff

Updated 2026-06-21 04:46:22 UTC by DC Tech Staff